



Tel: 0086-025-58196288 Fax:0086-025-58196399

Website: www.msbxf.com E-mail:onlysariel@gmail.com Floor 22, Huaqiao Square, Pukou district, Nanjing,China

MS EXPANSION JOINT FIRE BARRIER SPEC DATA

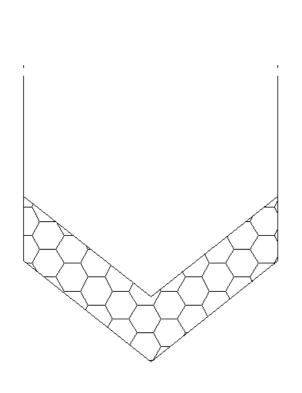



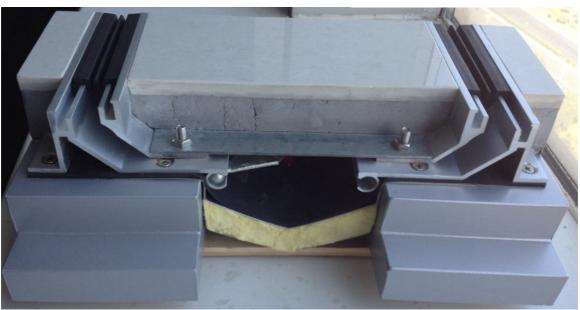

Product Description:

The MS Fire Barrier Protection System is an engineered high performance fire resistive system for sealing expansion joint openings.

The system is comprised of a flexible, high purity ceramic fiber blanket, galvanized steel foil and a matrix of fire resistive cloth as required to achieve a specified protection and endurance rating. System is secured top-down directly to the joint opening.

Basic Use:

MSFB has been tested and proven to provide up to 2-hour fire endurance rating, minimize smoke passage and accommodate dynamic movement without degradation of the material.

FEATURES

- Designed to provide the required fire endurance rating of 2 through 4 hours.
- Listed with an accredited independent laboratory.
- Accommodates dynamic movement without stress or degradation to its components.
- Minimizes passage of smoke.

SPECIAL FEATURES

- Design compatible with most expansion joints.
- No fire resistive caulks required.
- · Accommodates seismic lateral shear.

STORAGE & PROTECTION

All materials should be stored in a completely dry location prior to use. Fire Barrier must be kept dry before, during and after installation.

LIMITATIONS

- Expansion joint openings must be parallel and straight to achieve fire-resistive seal.
- Adjacent construction must have fire-resistive ratings equal to or greater than the rating of the fire barrier systems

STORAGE & PROTECTION

All materials should be stored in a completely dry location prior to use. Fire Barrier must be kept dry before, during and after installation

INSTALLATION

- Remove and repair all unsound concrete in and around the joint. opening. All spalls must be repaired with compatible patching material.
- Uncoil fire barrier and fold into a "U" shape configuration.
- Install fire barrier into expansion joint opening.
- •. Attach expansion joint system per Installation Guideline.
- •. Install anchors at specified intervals.

SELECTION GUIDE

| Model | Total | Joint Opening (mm) | | |
|---------|--------------|--------------------|---------|-----|
| Number | Movement(mm) | Min | Nominal | Max |
| MSFB25 | 25 | 25 | 25 | 50 |
| MSFB50 | 50 | 25 | 50 | 75 |
| MSFB75 | 77 | 38 | 75 | 115 |
| MSFB100 | 104 | 51 | 100 | 155 |
| MSFB125 | 127 | 64 | 125 | 191 |
| MSFB150 | 153 | 76 | 150 | 229 |
| MSFB175 | 178 | 88 | 175 | 266 |
| MSFB200 | 203 | 102 | 200 | 305 |
| MSFB300 | 305 | 152 | 300 | 457 |



Nanjing Meishuo Building Materials Co., Ltd