



1. Clean the garbage and check if the gap is equally wide and straight.

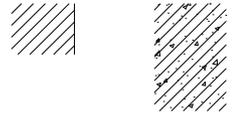


2. If the width of the joint width is not the same, make the chalk line at the widest place and cut the extra parts.




3. Install the water barrier. The side line of water barrier can't cover the ink line snapped. (Brush the special glue on the surface of the screed coat and the lower surface of the water barrier. After the glue is almost air drying, put the water barrier on the screed coat.)

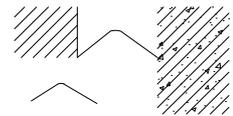

4. Install the aluminum frame and make sure the aluminum frame of two sides are on the same width and height.

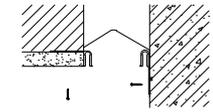

5. Cut the length of seal as needed for the run. Starting at one end of the run, insert seal into the slots of the frame.

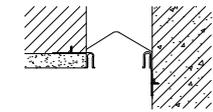

NOTE: In most cases hand pressure will be sufficient to seat the seal in the retainer. If necessary, you may use a rubber mallet and a wood block to gently seat the seal flush with the surface of the retainer.



6. Installation finish.

